

# ***Fission***



# ***Cycles***



<b>USING THIS MANUAL</b>	<b>5</b>
<b>GENERAL INFO</b>	<b>6</b>
Registration	6
Symbol Key	6
General Operating Rules	6
Mandatory Equipment and Use Locations	7
Changing Components or Attaching Accessories	8
Safety Check Before Each Ride	8
Accessories, Straps, and Hardware	8
<b>SAFETY INFORMATION</b>	<b>9</b>
Safety Notes	9
Battery and Service Safety	10
Brakes and Stopping Power	10
Brake Reach	11
Additional Brake Warnings	11
Throttle on Demand	12
Handlebar Stem and Front Wheel Alignment	12
Suspension, Handlebar, Grips, and Seat Adjustments	12
Tires and Wheels	13
Wheel Retention System:	13
Fork and Frame	14
Helmets	14
General Warnings	15
A Note for Parents and Guardians	15
<b>SPECIFICATIONS</b>	<b>15</b>
Specifications for FM 750x	15
Range for FM 750x	16
<b>ASSEMBLY INSTRUCTION FOR FM 750x</b>	<b>17</b>
Assembly	18
Step 1: Unpack the bike.	18
Step 2: Preparing the stem.	18
Step 3: Handlebar Installation.	18
Step 4: Front-wheel installation.	20
Step 5: Front fender installation.	21
Step 6: Put down the kickstand to support the ebike.	21
Step 7: Pedal installation.	22

Step 8: Inflate tires.	22
Step 9: Install saddle.	22
Step 10: Adjusting the seat position and angle.	22
Step 11: Adjusting the display and handlebar.	23
Step 12: Powering on the display.	23
<b>BATTERY AND ELECTRICAL</b>	<b>24</b>
Charging Procedure	24
Battery Charging Best Practices	25
Removing The Battery (FM750x)	26
Installing The Battery On The Bike (FM750x)	26
Charger Safety Information	27
Balancing The Battery	27
Long-Term Battery Storage	28
Recycling Used Batteries	29
Electrical System	29
Display Quick Start Guide For FM750x	30
Throttle:	32
Shifting For FM 750x:	32
How to use Thumb Throttle:	32
How to use Pedal Assist:	32
Backlight On/Off:	33
Walking Mode:	33
Lights and Reflectors Inspection	33
<b>OPERATION</b>	<b>33</b>
Guideline for Safe Riding	34
Unsafe Riding	34
Avoid Riding Too Fast:	35
Off-Road or Backcountry Riding:	35
Respect local regulations and rules / Private Property:	35
Wet Weather	35
Night Riding	36
Parking, Storage, and Transport	36
<b>MAINTENANCE</b>	<b>37</b>
Basic Bike Care	37
Maintenance and Care	37
<b>WARRANTY INFORMATION</b>	<b>41</b>

Standard Limited Warranty	41
Bicycle Lifespan	41
Limited Lifetime Frame Warranty	41
Warranty	41
Terms and Conditions of this Limited Warranty	42
General	42

## USING THIS MANUAL

This manual, provided by Fission Cycles™, contains details of the accompanied product, its equipment, and information on operation, maintenance, and other helpful tips for owners. Read it carefully and familiarize yourself with your Fission Cycles™ eBike before using it to ensure safe operation and prevent accidents. Do not operate your eBike until you have read and understood the entirety of this manual since there are important details related to safety in the following sections. This manual contains many warnings and cautions concerning the safe operation and consequences if proper setup, operation, and maintenance are not performed. Some basic maintenance and tuning can be performed by using this manual as a guide, however detailed repairs and general maintenance should be performed by a certified technician at a local bike shop as this manual is not intended as a comprehensive service, maintenance, use, and or repair manual.

Keep this manual, along with any other documents that were included with your eBike, for future reference. All content in this manual is subject to change or withdrawal without notice. Fission Cycles™ makes every effort to ensure the accuracy of its documentation and assumes no responsibility or liability if any errors or inaccuracies appear within. Visit our website to download the most recent version and view updates.

Read and understand all sections of this entire manual before operating your Fission Cycles™ eBike for the first time. There are important safety warnings throughout the manual that must be followed to prevent dangerous situations, accidents, damage to the eBike, damage to property, injury and or harm, or death. There are risks associated with the use of any bike that cannot be predicted or avoided and are the sole responsibility of the rider. It is impossible to anticipate every situation or condition that will occur while riding; this manual and by extension Fission Cycles™ makes no representations about the safe use of bikes under all conditions.

# GENERAL INFO

## Registration

Please register your new eBike at [www.fissioncycles.com/registration](http://www.fissioncycles.com/registration). By registering your product, Fission Cycles™ can communicate updates and safety information. If you choose not to register, make sure you check our website regularly for any new safety information. If you need additional information, please contact us at Fission Cycles™ directly.

## Symbol Key



This symbol indicated that the accompanying information refers to a potential hazard, important warning, or safety guideline.



This symbol indicates that the accompanying information refers to a general warning or notice.

## General Operating Rules

Notice: Pay special attention to all the general operating rules below before operating your Fission Cycles™ eBike.

- When riding, obey the same road laws as applicable by law in your area.
- Ride with the flow of traffic.
- Use correct hand signals to indicate turning.
- Ride defensively; to other road users, you may be hard to see.
- Concentrate on the path ahead and avoid obstacles and hazards that can cause the operator to lose control or puncture a tire.
- Cross-train tracks at a 90-degree angle or walk your bike across.
- Watch for opening car doors or cars backing out of driveways.
- Be careful at intersections and when passing other vehicles or cyclists.
- Familiarize yourself with all the features and operations of the bike by Fission Cycles™ Bikes. Practice and become proficient at shifting gears, applying the brakes, using the pedal-assist system, and using the throttle in a controlled setting before riding in riskier conditions.
- Wear proper riding clothes including closed-toe shoes. Avoid wearing loose pants to prevent them from being caught in the chain or gears.
- Do not use items that may restrict your hearing.
- Avoid bike stunts and/or aggressive riding

- Familiarize yourself with all the features and operations of the bike by Fission Cycles™. Practice and become proficient at shifting gears, applying the brakes, using the pedal-assist system, and using the throttle in a controlled setting before riding in riskier conditions.
- Never strap or latch any item to your bike in an area not designed to carry gear.
- Understand the operation of the thumb switch throttle and pedal assistance sensors before using the bike.
- Failure to perform and confirm proper installation, compatibility, proper operation, or maintenance of any component or accessory can result in severe injury or death.
- You should check the operation of the brake motor cutoff switches before each ride. The brake system is equipped with an inhibitor that cuts off power to the electric motor whenever the brakes are squeezed.
- Extreme care should be taken when using the pedal assistance sensor and throttle on this product.
- Ensure you understand and are prepared for the pedal assistance to engage as soon as pedaling is underway.
- Only carry gear on your racks and within the standard weight limit of the rack.
- Do not ride while intoxicated or using medications that may make you drowsy.
- Any aftermarket changes to your Fission Cycles™ bike not expressly approved by Fission Cycles™ could void the warranty and create an unsafe riding experience.
- After any accident, you must consider your bike unsafe to ride until you consult with a certified, reputable bike mechanic for a comprehensive inspection of all components, functions, and operations of the bike.
- Have reflectors and lights installed on your bike.
- Ride single file with other cyclists.
- Mount a horn or bell onto your bike to signal others of your approach.
- Wear bright colors and or reflective clothing.
- Check your local rules and regulations before carrying cargo.
- When braking, apply the rear brake first, then the front brake. If brakes are not correctly applied, you may lose control and/or fall.
- Maintain a comfortable stopping distance from all other objects, riders, and vehicles. Safe braking distances are based on factors such as road and light conditions along with other variables.

## **Mandatory Equipment and Use Locations**

Before riding, ensure you have all required and recommended safety equipment and are following all laws pertaining to use an electric bike in your region. For example, these laws may specify the need for mandatory equipment, use of hand signals, and where you can ride.

## **Changing Components or Attaching Accessories**

The use of non-original components or spare parts can jeopardize the safety of your ebike, void your warranty, and, in some cases, cause your ebike to not conform with laws pertaining to your bike.

The replacement of original components or installation of third-party accessories not explicitly recommended by Fission Cycles™ for your bike model is at your own risk. Using aftermarket accessories or components that have not been tested by Fission Cycles™ for safety and compatibility may void your warranty, create an unsafe riding condition, damage to property or your bike, or result in severe injury or death.

## **Safety Check Before Each Ride**

Always check the condition of your bike before you ride in addition to having regular maintenance performed. If you are unsure of how to conduct a complete check of the condition of your bike before every ride, you should consult a certified, reputable bike mechanic for assistance.

## **Accessories, Straps, and Hardware**

Ensure all hardware is secured and all approved accessories are properly attached per the specific component manufacturer's instructions. It is good practice to look over all hardware, straps, and accessories before each ride. If you discover something wrong or something that you are not sure about, have it checked by a certified, reputable bike mechanic.



# SAFETY INFORMATION

## Safety Notes

The following safety notes provide information on the safe operation of your Fission Cycles™ bike and should be closely reviewed. Failure to review these notes can lead to severe injury or death.

- All users must read and understand this manual before riding their Fission Cycles™ bike. Additional manuals for components used on the bike may also be provided and should be read before installing or using those components.
- Ensure that you comprehend all instructions and safety notes/warnings.
- Ensure the bike fits you properly before your first use. You may lose control or fall if your bike is too big or too small.
- Always wear an approved bicycle helmet whenever riding a bike. Failure to wear a helmet when riding may result in severe injury or death.
- Ensure correct setup, tightening, and torquing to recommended values is performed before first use. Check the setup, tightening, and condition of components and hardware regularly.
- It is your responsibility to familiarize yourself with the laws and requirements of operating this product in the area(s) where you ride.
- Ensure the handlebar grips are undamaged and properly installed. Loose or damaged grips can cause you to lose control and fall.
- Off-road riding presents variable conditions and hazards. Wear appropriate safety gear and do not ride alone in remote areas. Check local rules and regulations about whether off-road ebike riding is allowed.
- DO NOT ENGAGE IN EXTREME RIDING. This includes but is not limited to jumps, and stunts. Although many articles/advertisements/catalogs depict extreme riding, this is not recommended as you can be severely injured or killed by performing extreme riding.
- Bikes and bike parts have strength and integrity limitations and extreme riding, including but not limited to jumps, stunts, etc., should not be performed as it can damage bike components and/or cause dangerous riding situations in which you may be severely injured or killed.
- Failure to perform and confirm proper installation, compatibility, proper operation, or maintenance of any component or accessory can result in severe injury or death.
- After any accident, you must consider your bike unsafe to ride until you consult with a certified, reputable bike mechanic for a comprehensive inspection of all components, functions, and operations of the bike.
- Failure to properly charge, store, or use your battery will void the warranty and may cause a hazardous situation.

- You should check the operation of the brake motor cutoff switches before each ride. The brake system is equipped with an inhibitor that cuts off power to the electric motor whenever the brakes are squeezed.
- Extreme care should be taken when using the pedal assistance sensor and throttle on this product.
- Ensure you understand and are prepared for the pedal assistance to engage as soon as pedaling is underway.
- Users must understand the operation of the thumb switch throttle and pedal assistance sensors before using the bike and must take care to travel at speeds appropriate for the usage area, riding conditions, and user experience level.
- Any aftermarket changes to your Fission Cycles™ bike not expressly approved by Fission Cycles™ could void the warranty and create an unsafe riding experience.
- Because electric bikes are heavier and faster than normal bikes, they require extra caution and care while riding.
- Take extra care while riding in wet conditions including decreasing speed and increasing braking distances. Feet or hands can slip in wet conditions and lead to severe injury or death.
- Do not remove any reflectors.
- Maintain both hands on the handlebars.

## **Battery and Service Safety**



Remove the battery before attempting to service, make adjustments, or perform any maintenance on your eBike. Removing the battery will help ensure that the motor does not start inadvertently while service or maintenance is being performed.

The battery should be removed anytime the eBike is stored or left unattended to prevent unauthorized use or accidental engagement of the motor. Keep the battery out of reach of children. Failure to remove the battery may result in severe injury or death.



Never use a battery that is cracked or broken. Battery acid is highly corrosive and can cause severe burns! Battery acid can burn you if it makes contact with your eyes or skin. It can also damage personal property.

## **Brakes and Stopping Power**

Ensure that the brakes and their system components are free from damage, properly secured, and working correctly. When fully squeezed, both front and rear brake levers should not be touching the handlebar. Take your bike to a certified, reputable bike mechanic to have the brakes repaired if you find a problem.



Improper use of the braking system, including over-use of the front brake, can cause you to lose control and fall. Avoid improper braking by understanding and practicing the proper application of your brakes as explained in this manual.

Fission Cycles™ bikes come equipped with disc brakes. These brakes are different from other general types of brakes associated with bikes. Most bikes typically use rim brakes which operate by squeezing the wheel rim between two brake pads. Disc brakes squeeze a hub-mounted disk between two pads. Stopping power on your bike can vary depending on adjustments and pad thickness and wear. Consult your local bike shop about brake options and adjustments based on your specific needs.



Front and rear brake levers contain safety power cutoff switches, which disable the hub motor's assistance when applied. Both levers should be checked for correct operation before each ride. If the brake lever cutoff switches are not working, please contact Fission Cycles™ Support.

### **Brake Reach**

Some bikes have adjustable brake levers. These can be adjusted to fit each rider's specific needs. For example, if you have a short reach you may need the levers adjusted closer to the handlebar. This adjustment or brake lever replacement should be done by a certified bike technician or bike shop.



Disc brakes and discs get very hot during use and could burn skin. Also, the disc edges may be sharp and could cut skin. Avoid touching the disc or disc brake when hot, or when rotating.



Disc brakes may have sharp edges that could cut you. Also, after extended use, your disc brakes may get extremely hot, take special care not to touch them until they have cooled.

### **Additional Brake Warnings**

Disc brakes have varying amounts of stopping power depending on adjustments and pad conditions. Use extreme caution when applying the brakes. Never apply the brakes too hard or too quickly which could cause you to lose control and fall. The excessive or sudden application of the front brake could pitch the rider over the handlebars which may result in severe injury or death.



Never ride with worn brake pads or improperly adjusted brakes.

## **Throttle on Demand**

With throttle on-demand, you can throttle the bike from a complete stop. This feature is to help give you that extra push when you need it on a steep hill when arresting at multiple stop signs, etc. However, we strongly recommend pedaling first and throttling second to ensure proper stability and preparedness.

## **Handlebar Stem and Front Wheel Alignment**

Make sure the front wheel and handlebar stem are aligned in the proper orientation of each other.

Turn the handlebar from side to side with the front wheel locked between your knees to test the stem connection of the fork. If any movement is noted do not ride the bike until this is corrected. Inspect cable routing to be sure the handlebars can turn freely without binding or pinching the cables.

Check to be sure that your handgrips on the handlebars are in good condition and the bars are not protruding through the grip.

## **Suspension, Handlebar, Grips, and Seat Adjustments**

The suspension fork on your ebike will affect the handling of the bike so you must understand how it works before use. The suspension fork should be properly adjusted according to your weight and terrain. Ensure the handlebar and handlebar stem are properly aligned, fitted to the user, and secured to their recommended torque values. Handlebar grips should not move easily on the handlebar end. Loose, worn, or damaged handlebar grips should be replaced before you ride. The seat and seat post should be properly aligned, fitted to the user, and the seat post quick release should be properly tightened, fully closed, and secured before riding.

The seat should be adjusted for proper fit and is an important factor in riding safely.

Place pedals at 6 o'clock and 12 o'clock positions. Your bottom leg should be very slightly bent when the ball of your foot is placed on the lower pedal. If your leg is bent too much you need to raise the saddle. If you have to rock your hips to reach or can't easily reach, you must lower the saddle. Ensure that the saddle is straight and level.

Check that the seat is securely mounted on the seat post by lifting and pushing down on the seat. This should not tilt or move. Next, check the security of the seat post in the frame by attempting to rotate the seat. If the seat rotates, then the seat tube is not properly clamped into the frame.

## **Tires and Wheels**

Check the tire inflation. Use a tire pressure gauge to check the tire pressure. The tires should be set between the factory's recommendation that is printed on the tire.

Check before you ride:

- Spin each wheel and check that the tires are in good shape with no cuts or abrasions. If these are found, replace the tire immediately.
- Inspect the rim for trueness by spinning it and watching for any side-to-side or up-and-down wobble. If any movement is noted do not ride this bike until the rim is repaired.

### **Wheel Retention System:**

Some bike wheels are designed with quick-release attachments and others are bolted directly on using a hex-nut. There are 3 main methods of attachment as listed below:

- A hollow axle with a “skewer” shaft running through it which has a nut on one end and an over-the-center cam on the other end.
- A hollow axle with a “skewer” shaft running through it which has a nut on one end and a hex-key or tightening device on the other end.

Hex nuts or Hex key bolts are threaded into or on the hub axle



A wheel attachment device that is not properly adjusted and closed may allow the wheel to be loose or come off unexpectedly, causing you to lose control and fall causing severe injury or death! Make sure the wheels are properly attached before riding the bike

Your wheels should always spin straight and must be repaired or replaced if they wobble side to side or up and down when spinning. If your wheels become untrue or spokes loosen, which can happen with normal use, we recommend that a certified, reputable bike mechanic performs all-wheel tuning and truing operations on your Fission Cycles™ Bike. Do not attempt to true wheels or tighten spokes unless you have adequate knowledge, tools, and experience. Ensure the tires and inner tubes are in good working condition without any visual damage and have the

correct amount of air pressure. Always replace tires and inner tubes with punctures, cuts, or damage before you ride. Tires without the correct amount of air pressure can reduce performance, increase tire and component wear, and make riding your bike unsafe.

## **Fork and Frame**

Check the frame, fork, and components. If you notice that the frame or fork has any visible damage, cracks, dents, or you hear any unusual noise while riding or other problems, do not ride your bike. If at any time you notice a shimmy or wobble, immediately slow down and take your bike to your local bike shop for inspection and/or repair. Carefully inspect your bike before and after each ride.



Certain types of riding significantly increase stresses and abnormal wear and tear on your bike. This can include competition or stunt riding, downhill racing/riding, or jumping your bike.

Certain types of impacts can affect the components of your bike and cause them to fail unexpectedly. After any impact or crash, thoroughly inspect all the parts of your bike for damage. A crash or other impact can put extraordinary stress on the bike. An impact or high force is any situation such as hitting a hole or obstacle in the road, such as a bump or curb.



An eBike is a mechanical device. Materials and mechanisms are subject to fatigue and stress. Over time, components can fail once they have exceeded their useful limits and life. Product life is often related to the kind of treatment and riding you submit your bike to. Hard and aggressive riding along with neglect will shorten the projected lifespan of your bike and its components. If not properly maintained, your bike and its components can fail to cause severe injury or death.



A shimmy or steering wobble can cause you to lose control and fall. If you experience a shimmy, slow down immediately. Take your bicycle to a certified, reputable bike mechanic for inspection and repair.

## **Helmets**

When riding a bike, always wear a properly fitted helmet that covers the forehead. Many locations require specific safety devices. It is your responsibility to familiarize yourself with the local laws, rules, and regulations where you ride and to comply with all applicable laws, including equipping yourself and your bike as the law requires.

## General Warnings

Like any sport, bicycling involves the risk of damage, injury, and death. By choosing to ride a bike, you assume the responsibility for that risk, so you need to know, and practice the rules of safe and responsible riding and the proper use and maintenance of this bike. Proper use and maintenance of your bike reduces the risk of damage, injury, and death.

Biking and controlled substances do not mix. Never operate a bike while under the influence of alcohol, drugs, or any substance or condition that could impair motor functions, judgment, or the ability to safely operate a bike or other vehicles.

The FM 750x is designed for use by persons 18 years old and older. Riders must have the physical condition, reaction time, and mental capability to ride safely and manage traffic, road conditions, and sudden situations, as well as respect the laws governing electric bike use where they ride, regardless of age. If you have an impairment or disability such as a visual impairment, hearing impairment, physical impairment, cognitive/language impairment, a seizure disorder, or any other physical condition that could impact your ability to safely operate a vehicle, consult your physician before riding any bike.

## A Note for Parents and Guardians

As a parent or guardian, you are responsible for the activities and safety of your child. The FM 750x is not designed for use by children under the age of 18. If you are carrying a passenger in a child safety seat, they should also be wearing a properly fitted and approved helmet.

## SPECIFICATIONS

### Specifications for FM 750x

Model Name	FM 750x
Max. Load Capacity	250 lbs/ 113 kg
Max. Speed	20 mph/ Configurable to 28 mph
Motor	48V/ 750W Brushless Hub
Battery	48V/ 960 Wh Lithium-Ion

Range Average Per Charge	Average 45 Miles
Wheel Size (Front & Rear)	26 x 4"
Tire Pressure	5-30 PSI
Charger	48V 3A
Charging Time	Approximately 6 Hours
Water Resistance	IPX4
Weight	73 lbs/ 33 kg
Light Location	Front & Rear

\* Range Per Charge is measured under the conditions that power is sufficient, with a 165 lbs (75 kg) load, at 86°F (30°C), 70% humidity, on a level road, in pure electric riding mode. Actual results may vary based on differences in temperature, load, wind speed, road conditions, and other factors.


## Range for FM 750x

The range of your Fission Cycles™ bike is the distance the bike will travel on a single full charge of the battery. The range values in this manual are estimates based on the expected usage characteristics of Fission Cycles™ bikes. Some of the factors that affect range include changes in elevation, speed, payload, acceleration, number of starts and stops, ambient air temperatures, tire pressure, and terrain.

Expected Range	Operating Conditions
25 miles (40 km)	Hilly Terrain, Heavy Payload, Windy, High Pedal Assist Level, High Throttle Use, Light Pedaling
35 miles (56 km)	Flat Terrain, Normal Payload, Not Windy, Medium Pedal Assist Level, Moderate Throttle Use, Light Pedaling
48 miles (76.8 km)	Flat Terrain, Normal Payload, Not Windy, Low Pedal Assist Level/ Minimal Throttle Use, Moderate to Heavy Pedaling



## ASSEMBLY INSTRUCTION FOR FM 750x

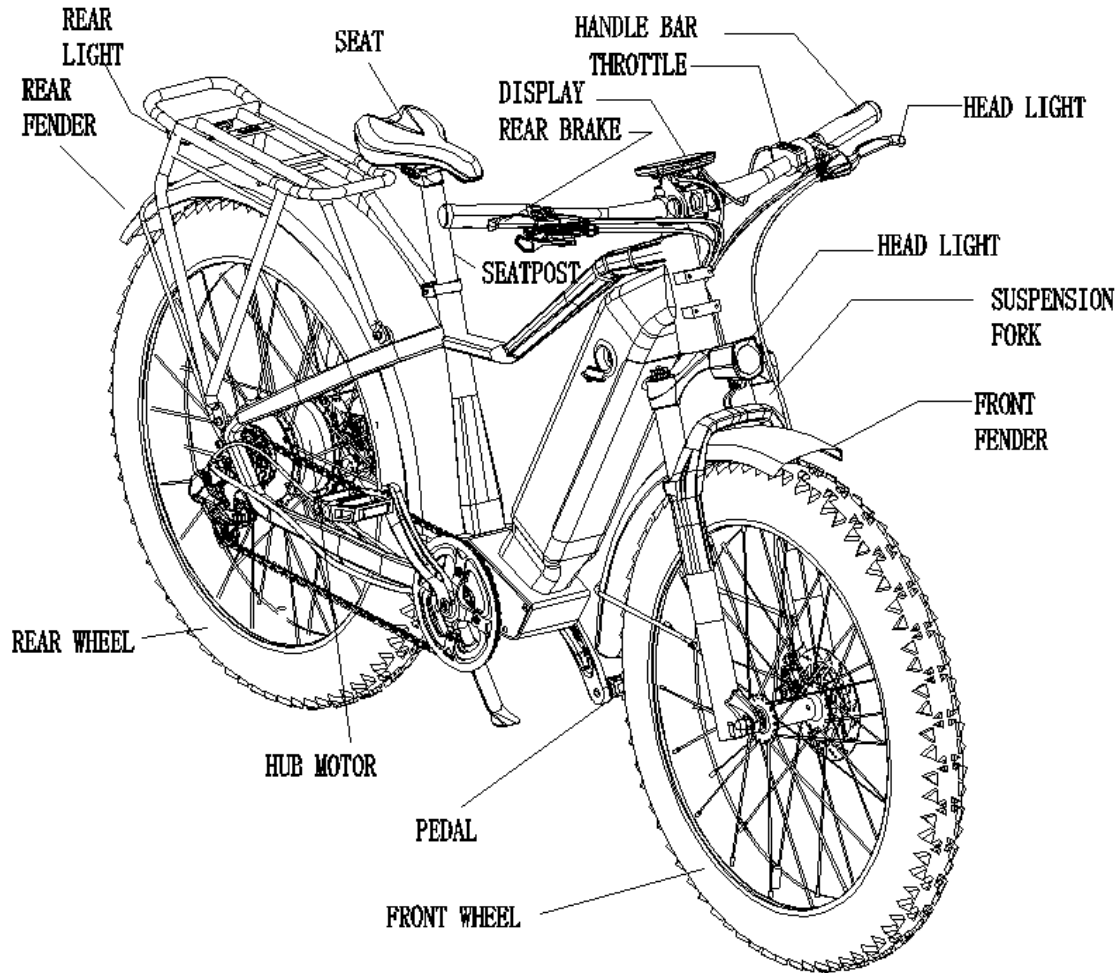

### What's In The Box:

1 FM 750x ebike  
1 Charger box  
1 Charger line  
1 Spare derailleur hanger  
1 Rack Strap

1 Wrench  
1 Owner's manual  
1 Hex key  
1 Left pedal  
1 Right peda

## Assembly

The following steps are only a general guide to assist in the assembly of your ebike and are not a complete or comprehensive manual of all aspects of assembly, maintenance, and repair. Consult a certified, reputable bike mechanic to assist with the assembly, repair, and maintenance of your ebike.

### Step 1: Unpack the bike.

Open the bike box. With the help of another person remove the ebike from the bike box. Carefully remove the packaging material protecting the bike frame and components. Locate and remove the smaller boxes. These smaller boxes contain your charger and accessories. Please recycle packaging materials especially cardboard and foam whenever possible.



Do **NOT** install the battery until the bike has been completely assembled.


### Step 2: Preparing the stem.

Remove the stem rubber cover, loosen the bolt using a 5mm hex key, and discard the packing protective material.


Loosen the screw in the stem and turn the stem so that it is oriented in the correct direction and aligns with the front fork.

### Step 3: Handlebar Installation.



Loosen and remove the four hex bolts from the mounting bracket cap located on the stem. Remove and set aside the cap from the mounting bracket along with the four hex bolts. Locate the handlebars, they will be attached to the frame by several cables.

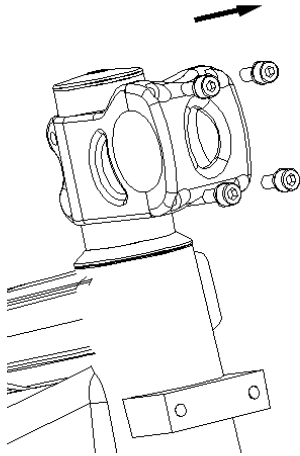

Orientate the handlebars so that the cables are not twisted and adjust the position.

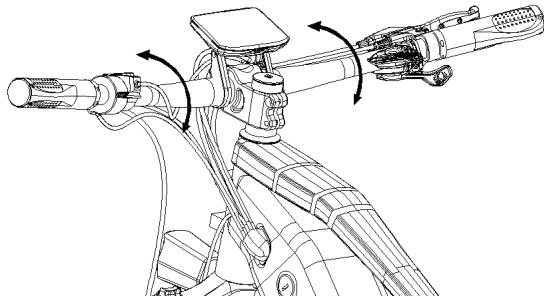

Set the handlebars into the mounting bracket and reattach the cap with the four hex bolts. Make any final adjustments and alignments then tighten the hex bolts so that the handlebars are secure. Check all the cables to ensure that they have not lost connection during the assembly.

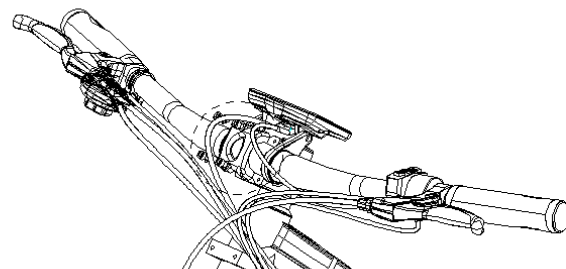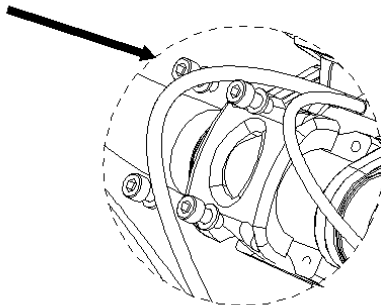


Cables can work loose and disconnect during shipping. Check all the cables to ensure they have not come loose. If a cable is loose, apply gentle pressure to each

side to reconnect. If cables are completely disconnected, use the arrows on the side of the connector to align the pins before connecting. **DAMAGE TO THE PINS CAUSED BY MISALIGNMENT WILL VOID THE WARRANTY**

#### **Step 4: Front-wheel installation.**

- 1) Locate the front wheel and remove the black protective guards.

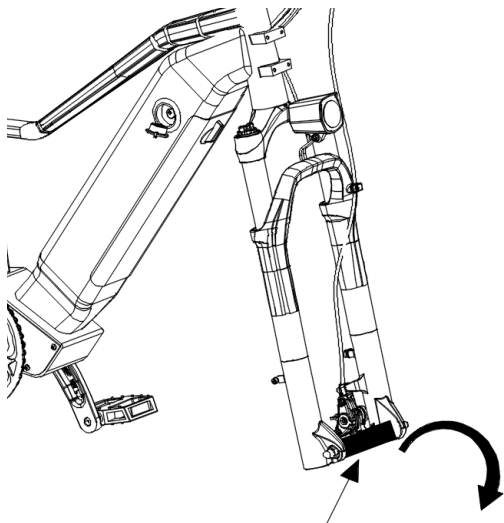

- 2) Remove fork protective cover and all other plastic protective inserts.
- 3) Loosen the front axle nuts and slide the front wheel into the front dropout on the fork. Ensure the brake rotor is between the brake pads of the brake caliper.
- 4) Use 15 mm open wrench to tighten the front axle nut, recommended torque at 25 - 30 Nm.



A critical aspect of assembling your bike is securing the front wheel and checking the tightness of the rear wheel axle nuts. Fission Cycles™ bikes use bolted on, through axle, or quick release front wheel mounting mechanism, and the rear wheel is bolted on. These mechanisms may become loose or unsecured during shipment or over time. The torque and security of the mounting hardware should be inspected upon arrival and on a regular basis. Both wheels need to be properly secured before operating your bike.




Never touch the brake rotor, especially when the wheel and/or bike is in motion, or severe injury could occur. Hand oils can cause squeaking and decrease brake performance.




An improperly secured front wheel and/or handlebar stem can cause loss of control, accidents, severe injury, or death. Check that the front wheel and handlebar stem are properly secured to the bike during assembly and before each ride.

**Step 5: Front fender installation.**

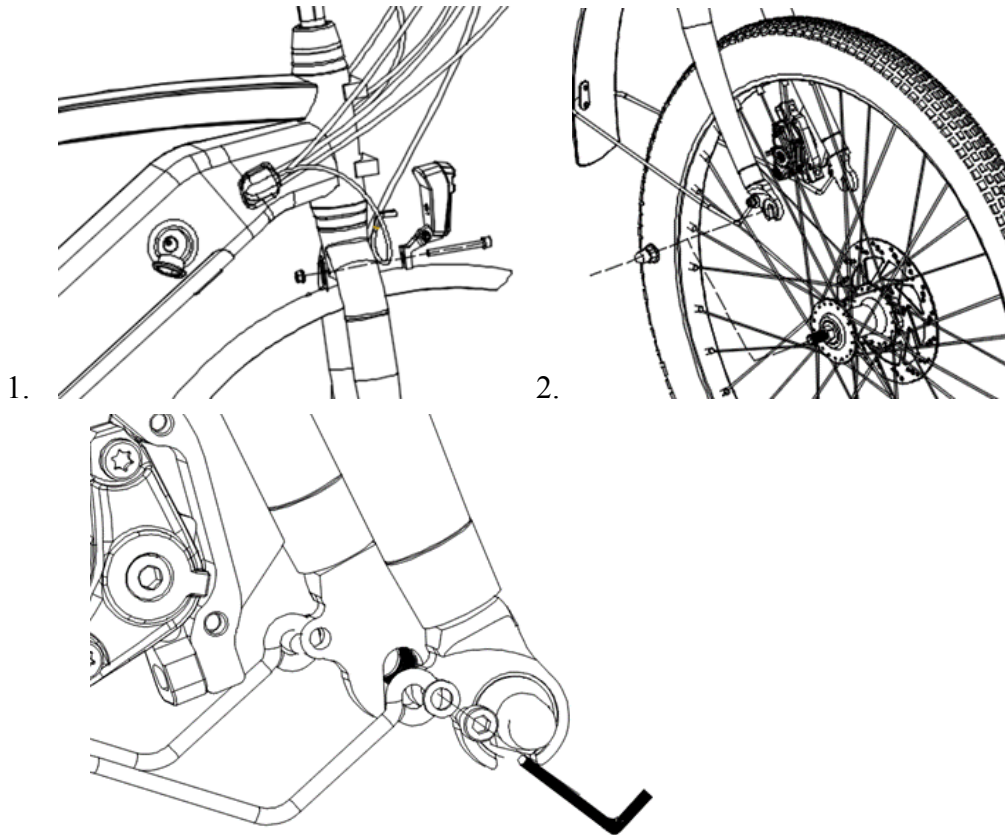

- 3.
- A. Use a 4mm hex key to loosen front fork screws.
  - B. Align the front fender to the screw holes, use a 4mm hex key to tighten the front fork screws.

**Step 6: Put down the kickstand to support the ebike.**

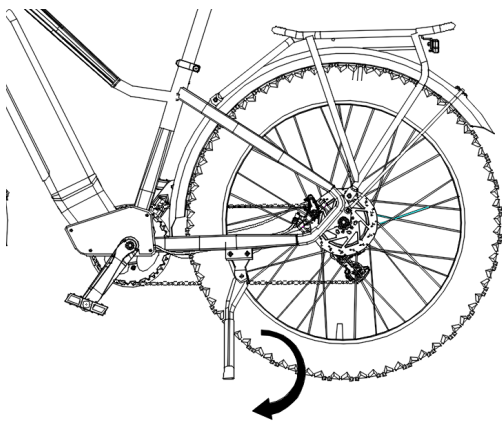

### Step 7: Pedal installation.

Use a wrench to install the pedals. Locate the pedal with a smooth pedal axle exterior and an “R” sticker label. If there is no sticker, the end of the bolt indicates “L” for left or “R” right. The “R” sticker indicates that it is the right pedal. The right pedal goes on the crank on the right side of the bike. The right side has the drivetrain gears and is the same as a rider’s right side when riding.

The right pedal is threaded so that it is tightened by turning clockwise. Apply grease to the thread and carefully thread the right pedal onto the crank on the right side of the bike by hand. Do not cross-thread or damage the threads.

The left pedal (pedal with "L" sticker label) is reverse-threaded and tightens counterclockwise. Apply grease and carefully thread the pedal onto the left crank by hand slowly. Do not cross-thread or damage the threads.



Torque each pedal to 35 Nm. The **right** pedal tightens clockwise and the **left** pedal tightens counterclockwise

### Step 8: Inflate tires.

Check that the tire beads and tires are evenly seated on the rims. Use a pump with a Schrader valve and pressure gauge to inflate each tire to the recommended pressure indicated on the tire, min of 5 PSI, max of 30 PSI. Do not over inflate or under inflate tires.

### Step 9: Install saddle.

Open seat post clamp lever, adjust the seat post to a comfortable height while ensuring the seat post is inserted past the minimum insertion point, as indicated on the seat post. Ensure the seat is properly oriented such that the tip is aligned with the frame of the bike. Close the seat post clamp lever.

### Step 10: Adjusting the seat position and angle.

To change the angle and horizontal position of the seat use a 5mm hex wrench to loosen the seat adjustment bolt on the clamp positioned directly underneath the seat, above the rear wheel. Do not completely remove the bolt.

Move the seat backward or forward and tilt to adjust the angle. A seat position that is horizontal to the ground is desirable for most riders. Do not exceed the limit markings on the seat rail, which show the minimum and maximum horizontal movement allowed.


While holding the seat in the desired position, use a 5mm hex key to tighten the seat angle adjustment bolt securely to the recommended torque value (8 Nm).

### **Step 11: Adjusting the display and handlebar.**

Stand in front of the bike and clamp the front wheel between both legs, verify the handlebars are straight and in line with the front wheel. Make sure the pinch bolts are tight and you can not turn the stem freely from the front wheel.

Sit on the saddle, adjust the handlebar to the desired position, tighten the screws which secure it to the handlebar with a 4 mm hex key.



Adjust the display to the desired position, tighten the screws with a 2mm hex key.

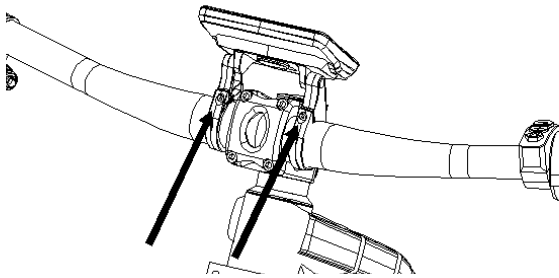

Adjust the headlight to the desired position, tighten the screws with a 4mm hex key

### **Step 12: Powering on the display.**

- A. Press the power button for 3 seconds to turn the display on.
- B. For more details about the display, please refer to the display section in this operating manual.

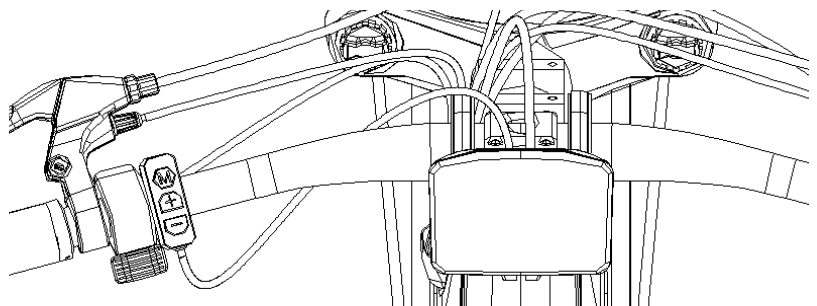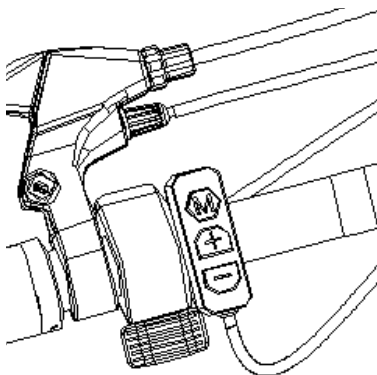


# BATTERY AND ELECTRICAL


## Charging Procedure

Follow these steps for charging your battery.

1. The battery can be charged both on and off the bike.
2. Open the rubber cover on the charging port.

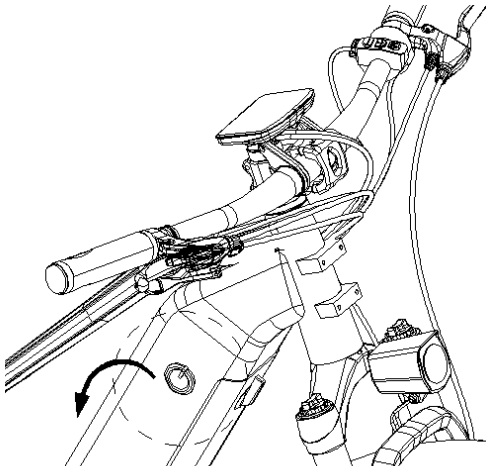

3. Place the charger in a flat, secure place and plug the charger into the battery's charging port, **before plugging into the power out.**

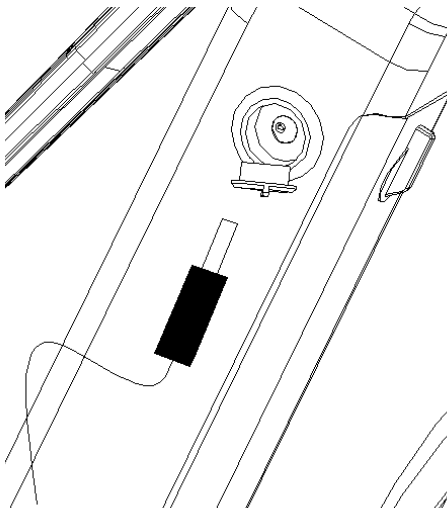



4. Plug the charger into a power outlet (110/240- volt plug). Charging should initiate and will be indicated by the LED charge status light on the charger.

**Flashing Red** - Battery not charging

**Red** - Battery is connected and charging

**Green** - Charging cycle is complete.

5. Once fully charged, unplug the charger from the outlet, then the charging port:  
Indicated light will turn green when fully charged.



Always charge your battery in temperatures between 50 °F – 77 °F (10 °C – 25 °C) and ensure the battery and charger are not damaged before initiating charge. If you notice anything unusual while charging, please discontinue charging and contact Fission Cycle's Support Team for help.

## Battery Charging Best Practices

- Check the charger, charger cables, and battery for damage before beginning each charge.
- Be sure to charge in an area where it is clear and safe from any potential damage.
- Place cables so they do not cause a tripping hazard to occur.
- Always charge indoors in a cool and dry area and away from direct sunlight, dirt, or debris.
- Always charge your battery in temperatures between 50 °F – 77 °F (10 °C – 25 °C).
- The battery can be charged on or off the bike. To remove the battery, turn the key to the unlocked position, and take the battery out. (Refer to the appropriate section in this manual for instructions.)
- Charging the battery normally takes 3-7 hours.
- Remove the charger from the battery within one hour of the green light indicating a complete charge.
- The charger is designed to automatically stop charging when the battery is full, but unnecessary wear of the charging components could occur if the charger is left attached to the battery and a power source for longer than 12 hours.
- Never charge a battery for more than 12 hours at a time.
- Do not leave a charging battery unattended.




Failure to follow Battery Charging Information could result in unnecessary wear to the charging components, battery, and or charger, and could lead to an underperforming or non-functional battery and replacement will not be covered under warranty.

## Removing The Battery (FM750x)

To remove the battery from the bike:

1. Insert the key and turn to the unlocked position.
2. While supporting the battery with one hand, rotate the dial on the battery to disengage the locking bolt, allowing the battery to move freely.
3. Firmly grasp the battery with both hands and slide the battery forward.
4. Then move it down to clear the battery of the frame.
5. Remove the key and store it in a safe/secure location.

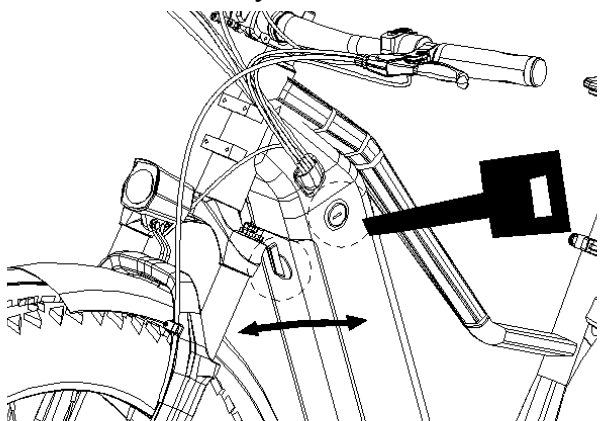

Use caution to avoid damage to battery connector terminals, which are exposed when the battery is unlocked and removed from the frame of the bike. In the case of damage to the terminals or battery mounts, please discontinue use and contact Fission Cycles™ Support immediately.



Remove the battery before attempting to service, make adjustments, or perform any maintenance on your eBike. Removing the battery will help ensure the motor does not start inadvertently while service or maintenance is being performed. The battery should be removed anytime the bike is stored or is left unattended to prevent unauthorized use or accidental engagement of the motor. Keep out of reach of children. Failure to remove the battery may result in severe injury or death.



Never ride your bike while the key remains in the keyhole.

## Installing The Battery On The Bike (FM750x)

1. Do not force the battery into the opening; slowly align and gently push the battery up and back into the connector.
2. Make sure there is no space between battery and tray, confirm the battery has been fully secured on the connector.

3. Ensure the battery has been properly secured to the bike before each use by carefully pulling outwards on the battery with both hands once locked.



Never use a battery that is cracked or broken. Battery acid is highly corrosive and can cause severe burns! Battery acid can burn you if it makes contact with your eyes or skin. It can also damage personal property.

## Charger Safety Information

- The charger should only be used indoors in a cool, dry, ventilated area, on a flat, stable, hard surface.
- Avoid charger contact with liquids, dirt, debris, or metal objects.
- Do not cover the charger while in use.
- Store and use the charger in a safe place away from children.
- Fully charging the battery before each use can help extend the life of the battery and reduces the chance of over-discharging.
- The charger works on 110/240 V 50/60 Hz standard home AC power outlets and automatically detects and accounts for incoming voltage. Do not open the charger or modify the voltage input.
- Do not yank or pull on the cables of the charger. When unplugging carefully remove both the AC and DC cables by pulling on the plastic plugs directly, and not on the cables.
- The charger is expected to get relatively warmer as it charges. If the charger gets too hot to touch, you notice a strange smell, or any other indicator of overheating, discontinue using the charger and contact Fission Cycles™ Support.



Charge the battery only with the charger originally supplied with the bike from Fission Cycles™, or a charger purchased directly from Fission Cycles™ that is designed for use with your specific bike serial number. Never use an aftermarket charger, which can result in damage, severe injury, or death.



Please take special care in charging your bike in accordance with the procedures and safety information detailed in this manual. Failure to follow proper charging procedures can result in damage to your bike, the charger, personal property, and/or cause severe injury or death.

## Balancing The Battery

When you first receive your bike, and for the first three charge cycles, complete the procedure outlined below to ensure the cells that power the battery are balanced and operating as efficiently as possible.

Follow these steps to balance your ebike battery:

1. After your first ride, regardless of the distance ridden or the amount of battery used, charge the battery for just under 12 hours (but never exceeding the 12-hour mark). Note: this will most likely require staying plugged in and charging even after the charger indicator light turns green.
2. Once you are near the 12-hour mark (do not exceed 12 hours) disconnect the charger from the wall outlet, then from the battery.
3. On your next use, ride your eBike normally.
4. Repeat steps 1-3 for the first three rides for a total of three (3) battery balance charge sessions.
5. After the third balance charge and fourth ride, begin normal charging procedures including:
  - a. Charging the battery after each ride according to the Battery Charging Information section.
  - b. Removing the charger from the battery shortly after the green charge light indicating the battery is full, which will typically occur between 3-7 hours.
  - c. Never leave the battery charging for longer than 12 hours.
  - d. Never leave the battery/charger unattended while charging.

Repeat battery balancing steps 1-5 only after a period of long-term battery storage (see the Long-Term Battery Storage section in this manual), if experiencing noticeable range decline, when instructed to do so by Fission Cycles™ Support, or up to once per month with frequent use as proactive battery maintenance. Do not perform battery balancing more than once per month.

## **Long-Term Battery Storage**

If storing your Fission Cycles™ bike for longer than two weeks at a time, follow the instructions below to maintain the health and longevity of your battery.

- Charge (or discharge) the battery to approximately 75%.
- Do not leave the battery attached to the bike frame. Remove it from the bike during long-term storage.
- Store the battery in a dry, climate-controlled, indoor location between 50 °F – 77 °F (10 °C – 25 °C).

- Check the battery every month, and if necessary, use the charger to charge the battery to 75% charged.



Please follow the above instructions for storing your bike and battery. Failure to follow proper battery storage procedures can result in a non-functional battery. Replacement will not be covered under warranty.



If the battery is physically damaged, non-functional, performing abnormally, or was dropped or involved in a crash, with or without obvious signs of damage, please discontinue use and charging and contact Fission Cycles™.



Do not cover up the charger while it is charging. The charger air cools and needs to be on a hard, flat surface in an open space. Use the charger with the indicator lights facing upward. Do not use the charger inverted, which can inhibit cooling and reduce charger lifespan.



Do not open the battery housing, which will void the warranty and can result in damage to the battery, property or cause severe injury and/or death.

## Recycling Used Batteries

Fission Cycles™ is committed to keeping our environment clean for all who enjoy outdoor activities. When your battery reaches the end of its useful life, dispose of it using an authorized and reputable recycling company.




Do not throw used electric bike batteries away with household garbage.

## Electrical System

The electrical system powers several components on your ebike that control different operating conditions and user preferences. It is critical that you familiarize yourself with all aspects of your eBike's electrical system and check to see if it is working correctly before every ride. The front and rear brake levers contain safety power cutoff switches, which disable the hub motor's assistance when applied. Both levers should be checked for correct operation. The throttle should provide smooth acceleration when gradually applied. If the throttle, brake lever cutoff switches, pedal assistance, or lighting are functioning abnormally, intermittently, or not working, please

discontinue the use of your ebike immediately and contact the Fission Cycles™ Support team for assistance.

## Display Quick Start Guide For FM750x

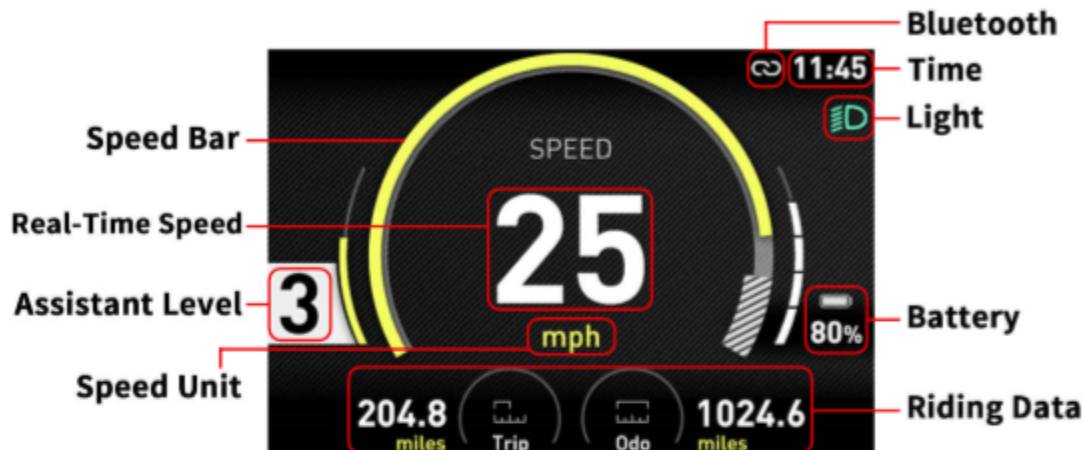

### Riding data pages

Click 'M' to switch.



### Assistant Level

Click '+' / '-' to switch.

3

Long press '-' is pedestrian mode.



## Setting Page

1. Long press '+' and '-' to enter the setting page.
2. Use '+' / '-' to navigate to the 'Auto light' line.
3. Press 'M' to change ON/OFF and other items using the same method.
4. Or press 'M' to enter next page.



## Connect to Bikewise Pro APP

1. Long press 'M' to enter the setting page.
2. Use '+' / '-' to navigate to the 'Bluetooth Connection' line and press 'M'.
3. Scan the QR-Code displayed on the screen with Bikewise Pro APP.



**NOTE:** While the bike is in Neutral, neither the pedal assist or the throttle will work.

**NOTE:** The battery will run out of power more quickly when using a higher level of pedal assistance.

## **Throttle:**

Your bike is equipped with an on-demand throttle. The throttle can only be used within pedal-assist levels 1 through 5. Level 0, or Neutral, is for conventional nonelectric riding. You can use the throttle along with the pedal-assist or on its own.

## **Shifting For FM 750x:**

Bikes often come equipped with index shifters. These are usually mounted on the handlebars within easy reach. Shifting gears into different gear combinations can be accomplished by moving the shifter from one position to the next and allows you to choose the gearing most suited to the terrain and type of riding. Be sure to continue pedaling as you shift gears; never pedal backward during or immediately after shifting as this could cause the chain to fall off.

Some bikes are equipped with two derailleurs and two shifters. One controls the front derailleur and the other controls the rear derailleur. Take time to familiarize yourself with which shifter governs which derailleur. You can complete this task while standing on the ground beside the bike (not riding) by moving the shifter and watching the front derailleur for movement. The shifter that causes the front derailleur to move operates the front derailleur and the other shifter will operate the rear derailleur.

## **How to use Thumb Throttle:**

When riding your Fission Cycles™ eBike, the thumb throttle can be used from a complete stop if the bike is not in Neutral. The operator must select the appropriate pedal assist level according to rider skill and terrain. Then by pushing down on the throttle, the motor will engage, and the bike will begin to move forward. The pedal assist level can be changed while the bike is in motion. As the power level from the motor is increased, the bike will react with more speed and power.

## **How to use Pedal Assist:**

When riding your Fission Cycles™ eBike, the pedal-assist can also be used from a complete stop if the bike is not in Neutral. The operator must select the appropriate pedal assist level according to rider skill and terrain. Then the rider can begin to pedal, and after 1 or 2 revolutions on the pedals (depending on speed) the motor will engage and assist the rider in propelling the bike forward. The pedal assist level can be changed while the bike is in motion. As the power from the motor is increased the bike will react with more speed and power.





**Warning:** do not pedal when making sharp turns. The motor will engage and could cause the bike to move faster through the turn than anticipated!

### **Backlight On/Off:**

Press and hold the “Up” button for three second to turn the backlight on/off.

### **Walking Mode:**

Place the bike in any gear that is not Neutral. Press and hold the “Down” button to enter the walking mode. Exit the walking mode by releasing the button.

### **Lights and Reflectors Inspection**

Make sure the reflectors are securely mounted in the proper position and they do not have any cracks or visible damage. All lighting should be inspected to be sure they are working properly. If applicable, all lighting should be inspected to be sure they have fresh batteries.

## **OPERATION**

**NOTICE:** Do not operate your bike until you have read and understood the entirety of this manual since there are important details related to safety in the following sections.



Read and understand all sections of this entire manual before operating the bike for the first time. There are important safety warnings throughout the manual that must be followed to prevent dangerous situations, accidents, damage to the bike, damage to property, injury, or death.



Users must follow the instructions and warnings contained in this manual for safety. Do not attempt to operate your Fission Cycles™ Bike until you have adequate knowledge of its control and operation. Damage caused by failing to follow instructions is not covered under warranty and could result in severe injury or death. Contact Fission Cycles™ if you have any questions about assembly or operation.



Users must become accustomed to the bike’s power control system before operating. The pedal assistance feature is also a powerful option and users should fully research and understand how to operate it before first use. Not taking the time and care to familiarize yourself and practice the operation of the power system on your Fission Cycles™ Bike can lead to damage, severe injury, or death.

## **Guideline for Safe Riding**

You must ensure that you understand the safe operation of this bike and follow all traffic, bike laws, and regulations in the area in which the bike is being operated. These may include rules regarding helmets, reflectors, and lights. A few important general rules for riding include but are not limited to:

- Wear a helmet that meets ASTM or CPSC safety testing requirements.
- Have reflectors and lights installed on your bike.
- Use proper hand signals.
- Avoid loose clothing.
- Ride on the correct side of the road with the flow of traffic.
- Always wear a bright color and reflective clothing.
- Ride single file if riding with others.
- Obey all traffic laws and regulations.
- Watch for parked car doors opening unexpectedly.
- Watch for pedestrians stepping out, pets, and children playing near the roadway.
- Never ride with earbuds or headphones.
- Always obey traffic signals.
- Use caution when crossing railroad tracks and carefully cross at a 90-degree angle.
- Mount a horn or bell onto your bike to signal others of your approach.

Before riding fast or in more difficult conditions, try riding at slower speeds in a flat, open lot to test the function and performance features of your bike. Consult your local bike shop if you have specific questions concerning the parts and functionality of your bike. Some areas offer cyclist courses or classes which can be found online or through your local bike shops.

## **Unsafe Riding**

While not all accidents can be avoided the list below outlines a few examples of things you can do to help decrease your risk of severe injury or death.

- Pay attention and avoid distractions while riding.
- Always maintain both hands on the handlebars.
- Avoid bike stunts and/or aggressive riding.
- When carrying gear make sure it is securely attached to your bike and/or rack.
- Never strap or latch any item to your bike in an area not designed to carry gear.
- Only carry gear on your racks and within the standard weight limits of the rack.
- Do not ride while intoxicated or using medications that might make you drowsy.

### **Avoid Riding Too Fast:**

Higher speeds create higher risks and greater forces in the event of a crash. At higher speeds, it is more likely that wheels will slip, or that a small bump can create a significant impact on your frame or fork. Always keep your bicycle under control. For children, the limit of speed for safe riding is much lower, so parents should strictly enforce this rule.

### **Off-Road or Backcountry Riding:**

Always use special care when riding off-road or in remote areas. If you are unfamiliar with off-road riding, start on moderate terrain and slowly build your skills until you are confident you can ride on trails and unimproved roads. Remember, keep your bike under control at all times! Never attempt an obstacle that is beyond your skill level. Riding at an increased speed in rough conditions greatly increases your risk of severe injury or death.

Special Considerations for Remote Areas:

- While riding on rough terrain, even if a short distance, share your destination and route with another adult.
- Never ride alone in remote areas.
- Carry a signaling device such as a whistle, cell phone, or 2-way radio.
- Take identification and emergency food and drink.
- Wear appropriate clothing and safety gear for the type of riding you plan.
- Carry a first aid kit.

### **Respect local regulations and rules / Private Property:**

Remember each area in which you may ride your bike may have specific regulations. Always respect private property and never trespass. Respect the rights of others who may be sharing the trail or route with you; ie: hikers, cyclists, equestrians. Stay on your designated trail or route and do not destroy vegetation and minimize your impact on the environment.

### **Wet Weather**

Use extra caution when riding in wet weather. Your brakes stopping power will be diminished in wet conditions no matter what type of brake system your bike is equipped with. All brake systems are affected by wet weather. To ensure you can stop safely in wet conditions, ride more cautiously and slowly and brake earlier than you would in normal road and weather conditions.

Never ride in storms with high winds and lightning conditions. Ride in wet weather only if necessary. This electric bike is not meant for use in heavy rain or streams. Never immerse or submerge this product in water or liquid as the electrical system may be damaged.

In wet weather, you need to take extra care when operating this bike.

- Decrease riding speed to help you control the bike in slippery conditions.
- Brake earlier since it will take longer to slow down and come to a stop than when operated in dry conditions.
- Take care to be more visible to others on the road.
- Wear reflective clothing and use approved safety lights.
- Road hazards are more difficult to see when wet; proceed with caution.

## Night Riding

Riding at dawn, dusk, during poor visibility or night riding is extremely dangerous. Your reflectors are not a substitute for required bike lights. Motorists and pedestrians may not be able to see a cyclist during poor visibility conditions. Consult your local bike shop for night riding equipment if you choose to accept the risk of riding during these conditions in addition to following these rules:

- Wear reflective and light-colored clothing.
- Slow down and use familiar roads with street lighting, if possible.
- Ensure tire wall, pedal, and other reflectors are installed and unobstructed.
- Ensure headlight and taillight/brake light are functioning correctly and remain on.



Riding a bicycle in low light conditions without proper lighting and reflectors attached to your bike impairs your ability to see and be seen by other motorists or pedestrians.

This greatly increases the chance you will be involved in an accident that could lead to severe injury or death. Use a light on the front and rear of your bike and be sure all reflectors are in place before riding in low light conditions. Refer to your local laws for any additional requirements for cycling at night.

## Parking, Storage, and Transport

Please follow these basic parking, storage, and transport tips to ensure your bike is well cared for on and off the road.

- When pushing or carrying the bike manually, turn off the power to avoid accidental acceleration from the motor.
- Turn the power and any lights off to conserve battery.
- Ensure the battery is locked to the frame or use the key to remove the battery and bring it with you for security or storing in a temperature-controlled location.
- Park indoors when possible. If you must park outdoors in rain or wet conditions, leave your ebike outside for only a few hours and then park it in a dry location as soon as possible to allow all of the systems to dry out. As with a regular bike, an ebike used in

wet conditions needs more frequent maintenance to prevent rust, corrosion, etc., and to ensure all systems are working safely.

- In public places, your Fission Cycles™ Bike must be parked in accordance with local rules and regulations.
- Locking up your bike is recommended to ensure your bike is secure and the chance of theft is reduced. Fission Cycles™ makes no claims or recommendations on the proper lock hardware or procedures to secure your bike, but we do recommend you take appropriate precautions to keep your bike safe from theft.
- Do not park, store, or transport your Fission Cycles™ Bike on a vehicle rack not designed for the bike's size and weight.
- Use a vehicle rack compatible with the width of tires used on your bike. Some racks may not accommodate all tire widths.
- When carrying your bike on a vehicle rack for transport, unlock and remove the battery. This will reduce the weight of the bike, make lifting and loading easier, and allow you to protect the battery by transporting it in the cab of a vehicle.
- Avoid transporting your Fission Cycles™ Bike on a vehicle rack during rain, as this may cause water damage to the electrical components.

## MAINTENANCE

### Basic Bike Care



If you do not have the experience, skill, and tools to complete maintenance and adjustment of your bike, Fission Cycles™ strongly recommends having a certified, reputable bike mechanic maintain, tune, and ensure the bike is safe to ride.

### Maintenance and Care

Before every ride, complete a bike inspection. If you identify any areas that need adjustment or service, immediately take your bike to a certified bike technician for repair and service.

Before Every Ride:

- Check hardware for proper torque.
- Check wheels for trueness.
- Check the drivetrain for proper alignment.
- Check tire inflation level.
- Check brakes and brake pads.
- Check handlebar and stem alignment and torque.
- Check seat and seat post.
- Check lights and reflectors.
- Check the condition of the frame, fork, and components.

### Monthly or Every 100 Miles:

- Clean your bike thoroughly.
- Lubricate chain rollers with bike chain lubricant.
- Squeeze and inspect brakes for wear and proper working order.
- Check reflectors, lights, and seat/seat post for wear or damage.
- Check the frame, fork, handlebars, and stem for cracks and damage.
- Check each pedal to make sure they are not loose.
- Make sure there is no rust or kinks in the control cables or cable housing.
- Check your wheel rims for excessive wear and dents or any loose or damaged spokes.
- Check your tires for tire inflation and excessive wear, cuts, or abrasions.
- Inspect shifters and derailleurs and lubricate the derailleurs.

### Every 3 Months:

- Clean and polish your bike thoroughly.
- Lubricate chain rollers with bike chain lubricant.
- Squeeze and inspect brakes and brake pads for wear and proper working order.
- Check reflectors, lights, and seat/seat post for wear or damage.
- Check the frame, fork, handlebars, and stem for cracks and damage.
- Lubricate handlebar stem and seat post.
- Check each pedal to make sure they are lubricated and not loose.
- Make sure there is no rust or kinks in the control cables or cable housing.
- Check your wheel rims for excessive wear, dents, looseness, or damaged spokes.
- Check your tires for tire inflation and excessive wear, cuts, or abrasions.
- Check the crankset and bottom bracket.
- Inspect brake levers, shifters and derailleurs.
- Lubricate brake levers, shifters, and derailleurs.
- Lubricate bottom bracket bearings, wheel bearings, and suspension fork.

If you are uncomfortable with any service or general maintenance to your bike, please visit your local bike shop for a certified, reputable bike mechanic to perform service and maintenance.

Take your bike to your local bike shop for inspection by a certified, reputable bike mechanic after 30 days. If you believe something is wrong with your bike take it in immediately.



Your bike and components are subject to wear and fatigue. If a component's life cycle is exceeded it can suddenly fail which may cause severe injury or death.

Take your bike to your local bike shop for repair and service by a certified, reputable bike mechanic if you notice any of the following or any other wear and fatigue:

- Any cracks, fraying, scratches, or discoloration.
- If your chain is not shifting quietly from gear to gear the derailleur is out of adjustment.
- If the brake lever fails
- Any signs of fatigue or excessive wear or damage

NOTE: If you notice any signs of wear, damage, or fatigue, **DO NOT RIDE YOUR BIKE**. Take your bike immediately to a local bike shop for repair and service by a certified, reputable bike mechanic!

Regular inspection and maintenance are key to ensure your Fission Cycles™ Bike functions as intended and to reduce wear and tear on their systems. Recommended service intervals are meant to be used as guidelines. Real-world wear and tear, and the need for service, will vary with conditions of use. We generally recommend inspections, service, and necessary replacements are performed at the time or mileage interval that comes first in the following table.

Interval	Adjust/ Replace
Weekly or Every 100 - 200 miles (161 - 322 km)	-After each inspection, replace any components that are damaged or show considerable wear and tear. -Use barrel adjusters to apply the correct tension to derailleurs and brake cables if needed.  *Cables stretch over time and will need to be adjusted.
Monthly or, Every 500 - 800 miles (805 - 1287 km)	-Replace brake and shift cables if necessary. -Replace brake pads if necessary.
Every 6 Months or, Every 800 -1500 miles (1287 - 2414 km)	-Replace brake pads. -Replace tires if necessary. -Replace cables and housing if necessary.



Your cables, spokes, and chain will stretch after an initial break-in period of 50-100 mi (80-160 km), and bolted connections can loosen. Always have a certified, reputable bike mechanic perform a tune-up on your Fission Cycles™ Bike after your initial

break-in period of 50-100 mi (80-160 km) (depending on riding conditions such as total weight, riding characteristics, and terrain). Regular inspections and tune-ups are particularly important for ensuring that your bike remains safe and fun to ride.



# WARRANTY INFORMATION

## Standard Limited Warranty

### Bicycle Lifespan

Fission Cycles™ eBikes have an expected lifespan depending on the level of care and/or use. Misuse, neglect, and abuse will significantly reduce the expected lifespan of your bike. Some types of riding styles (competition, jumping, downhill racing, and extreme conditions or climates) will all impact the lifespan of your bike and its components. These types of riding may cause premature failure of your bike and its components. This warranty does not extend to any failures associated with this type of riding, or to any Fission Cycles™ products that have been subject to misuse, neglect, abuse, or improper storage, or if the product is modified or altered in any way other than as directed by official Fission Cycles™ instructions. Always have your bike periodically inspected by a certified bicycle technician. These inspections are crucial for the safety of you and others around you as well as extending the lifespan of your Fission Cycles™ eBike.

### Limited Lifetime Frame Warranty

Fission Cycles™ eBike frames are warranted against factory defects for the lifetime of the original purchaser as long as they remain the owner of the Fission Cycles™ eBike. This warranty is non-transferable. Your Fission Cycles™ frame is warranted against premature failure caused by faulty workmanship or materials, as determined by Fission Cycles™. Frames

must be returned to Fission Cycles™ at the owner's expense for determination of defect and/or replacement. If a frame replacement is found to be warranted by Fission Cycles™, a comparable frame (depending on availability) will be issued to the original purchaser. Front forks and suspension forks do not have a lifetime warranty!

### Warranty

Beyond the lifetime frame warranty, Fission Cycles™ warrants all bikes, enclosed hardware (where applicable), and accessories to be free from defects in material and workmanship for twenty-four months from the original date of purchase. Some components on your Fission Cycles™ eBike such as brakes, tires, tubes, chains, grips, motors, and cables are not warranted against normal wear. If you find a product to be defective, contact Fission Cycles™ through the official website ([www.fissioncycles.com](http://www.fissioncycles.com)). All components must be returned at the owner's expense for inspection. Product repairs and/or updates not covered by warranty will be provided at a set rate. At its sole discretion, Fission Cycles™ will determine whether the component will be covered under this warranty. This warranty is in lieu of all other warranties expressed or implied. You may have certain legal rights that extend beyond this warranty in certain states.

## **Terms and Conditions of this Limited Warranty**

This limited warranty does not cover installation, disassembly, adjustments of components, normal wear and tear, damage caused by improperly installed parts or components, installation, and use of aftermarket accessories or storage fees. Any installation of a power plant (motor electric or internal combustion) other than power plants supplied directly by Fission Cycles™ immediately voids this warranty. Some parts and components may from time to time become obsolete or discontinued. Fission Cycles™ reserves the right to substitute any component at its sole discretion. This is the only warranty provided or honored by Fission Cycles™, and no other warranty will be honored unless specifically provided for by law. No implication of merchantability or fitness for a particular purpose has been made by Fission Cycles™.

## **General**

Fission Cycles™ will not be held liable for any damages resulting from a breach of warranty or for sums beyond the purchase price of the product. Fission Cycles™ is not liable for lost profits or goodwill; downtime; damage or destruction of items or equipment used with, or in conjunction with Fission Cycles™; personal injury or loss; or any other damages. This agreement is the entire agreement between you and Fission Cycles™, and supersedes any prior agreements, representations, or proposals; and may be changed only by written agreement with Fission Cycles™. A waiver by any party or breach of this agreement will not constitute a waiver of any subsequent default or breach of the same or different kind. The invalidity of any provision of this agreement shall not affect the validity of the other provisions hereof.

